

WHEEL ASSEMBLY INSPECTION AND MAINTENANCE

I. INSPECTION

Failure of any of the following inspections will require maintenance and/or repair as detailed in the following sections.

1. Insure that the wheel tie bolts are secure and have not worked loose.
2. Visually inspect the wheels for corrosion, cracks, or other visible damage.
3. Inspect the brake disc for evidence of cracks, corrosion, deep grooves, or other visible damage.

II. MAINTENANCE AND REPAIR

1. Removal of the wheel assembly

- a. Remove wheel hub cap.
- b. Remove brake caliper back plates. It is not necessary to disconnect the hydraulic line.
- c. Jack and secure the aircraft in accordance with manufactures instructions.
- d. Ensure that the aircraft is stable.
- e. Deflate the tire by depressing the valve stem plunger until no more air escapes.

<p>CAUTION: Do not attempt to remove valve stem core, loosen the axle nut, or disassemble the wheel halves until all tire pressure has been released. Failure to do so can result in severe personal injury.</p>

- f. Remove the valve stem core.
- g. Remove the axle cotter pin and axle nut.
- h. Carefully slide the wheel assembly off of the axle.


2. Disassembly of the wheel

- a. Place the wheel assembly on a suitable working surface. Care must be taken to prevent damage to the wheel such as scratches and/or nicks which will destroy the corrosion resistant protection of the wheel.
- b. Separate the tire beads from the wheel halves using a tire bead breaker or other suitable tool. Do not pry between the tire and wheel flange as damage to tire and/or wheel may occur.
- c. Remove the nuts, washers and bolts that hold the wheel halves together.
- d. Separate and remove the brake disc from the inner wheel half.

- e. Separate each wheel half from the tire using care to not damage the inner tube or its valve stem.
- f. Remove the retaining snap rings, washers, felt grease seals and wheel bearings using care to prevent damage to the wheel or bearings.

3. Inspection and Repair

- a. Inspect the bearing races for scoring, corrosion, signs of over heating or other physical damage. Loose bearing races are cause for rejection of the wheel half. If replacement of the race is necessary carefully press it out using a press and properly sized bushings as illustrated.

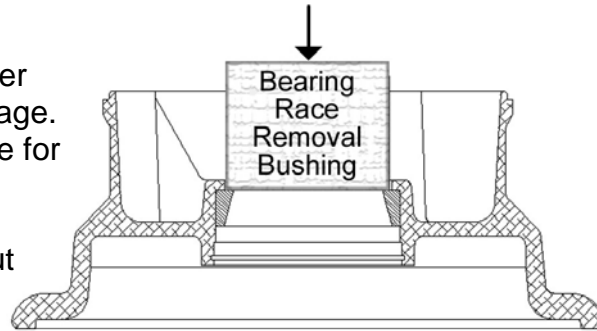

- b. Visually inspect each wheel half for cracks, nicks, corrosion or other damage. Particular attention should be paid to the tire bead seat area. Obvious cracks and severe corrosion are cause for rejection of the part. A further inspection using the dye penetrant method should be performed on any part whose serviceability is questionable. Small nicks, scratches and pits may be blended out and polished with fine (400 grit) sandpaper and then painted and/or treated for corrosion resistance.
- c. Clean the wheel bearings in a suitable solvent and air dry using compressed air being careful to not allow the compressed air to spin the bearings.
- d. Inspect the bearings for pitting, cracks, evidence of overheating, or excessive corrosion, any of which is cause for rejection of the part.
- e. Inspect the felt grease seals. Excessively worn, hardened or contaminated seals are cause for replacement. Serviceable seals should be cleaned in solvent, air dried, and set aside in a clean, protected environment until required for reassembly.
- f. Inspect the felt seal retaining washers and snap rings for distortion, excessive corrosion or other physical damage which is cause for rejection.
- g. Inspect wheel tie bolts for cracks, bending, thread damage, or excessive corrosion, any of which is cause for rejection. The tie bolts are subjected to fatigue type loads and should be replaced whenever there is any question as to their serviceability.
- h. Test the wheel tie bolt nuts by installing them onto the bolts. If the nut can be turned by hand past the self-locking section, it must be replaced.
- i. Inspect brake disc for excessive wear, scoring, or corrosion, cracks, warpage, or other physical damage which is cause for rejection of the part.

Replace the disc if the disc thickness is less than 0.164 inches. Minor corrosion and surface irregularities can be blended using 220 grit sandpaper. Any corrosion on the non-braking part of the disc should be removed and then painted and/or treated for corrosion resistance.


4. Reassembly of the Wheel

Reassembly of the wheel is basically the reverse of the disassembly process. Assemble the wheel on a clean, flat surface being careful to not nick, scratch, or damage the protective finish of the wheel.

a. Reinstall the bearing races if applicable. Heating the wheel and/or cooling the bearing race is of minimal benefit in the installation process.

- (1) Clean the wheel bearing race bore and apply a thin coat of wheel bearing grease.
- (2) Place the bearing race in the wheel bore, being careful to insure that it is aligned properly and not cocked.

- (3) Place the wheel half in the press as shown in the following figure being sure to support the wheel half at the bottom of the bearing seat. Failure to do this may result in breakage of the wheel casting if too much force is applied.

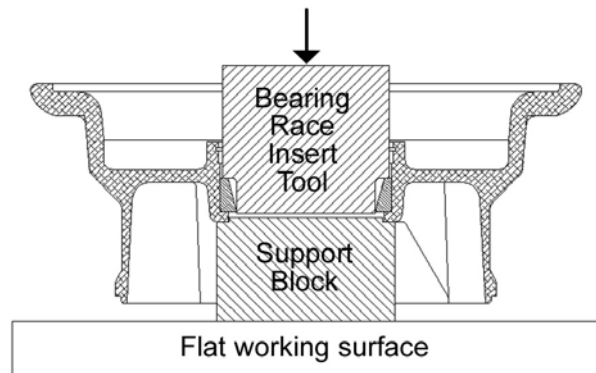

- (4) Press the bearing race into the wheel until it is fully seated.
- (5) Remove the wheel from the press and visually check to see that the race is fully seated and that it is tight in the wheel.

b. Mount the tire on the wheel

- (1) Ensure that the wheel is clean and dry. Particular attention should be paid to the bead area to ensure that it is clean, dry and free of grease or other contamination which may cause the tire to spin on the wheel as the brakes are applied.
- (2) Insert the inner tube into the tire. Align the red dot on the tire (its lightest point) with the white or yellow dot on the tube (its heaviest point). If the tube does not have a white dot, align the red dot on the tire with the valve stem of the tube. In order to allow the tube to move freely within the tire, it is recommended that you coat the tube and inner part of the tire with talc powder.

- (3) Inflate the inner tube to approximately 10 psi, allowing it to take the shape of the tire. Deflate the tire to the point that it just retains its shape.
 - (4) Place the tire and tube onto the outer wheel half carefully inserting the valve stem through the hole in the wheel half.
 - (5) Insert the inner wheel half into the tire with the tie bolt holes aligned and using care not to pinch the inner tube.
 - (6) Place the wheel and tire assembly on a flat working surface with the inner side of the wheel facing up. Install the brake disc in the inner wheel half and align the bolt holes with the wheel half. Insert the three tie bolts, with washers under the heads, through the brake disc and wheel.
 - (7) Rotate the wheel from the working surface in order to be able to attach the nuts to the tie bolts. Hand tighten a nut with washer on each of the tie bolts. Care should be taken to ensure that the wheel halves are in contact with each other and not pinching the inner tube.
 - (8) Torque the tie bolt nuts: 90 inch-pounds for 1/4" bolts and 150 inch-pounds for 5/16" bolts. Observe the amount of torque required to turn the nut due to the locking friction of the nut and add this to the required torque value to get the proper torque wrench reading.
- c. Repack the bearings using MIL-G-81322 grease such as Aeroshell 22, Mobil 28, or equivalent.
 - d. With the wheel on a flat working surface, insert a wheel bearing. Lightly coat the bearing race with bearing grease before installing the bearing.
 - e. Install the washers, felt grease seal and retention snap ring. A light coat of light weight oil on the felt grease seal is recommended.
 - f. Turn the wheel over and repeat steps 3 and 4.
 - g. Place the wheel in a protective enclosure and inflate to 60 psi. Deflate the tire by depressing the valve stem plunger and re-inflate to the pressure recommended by the aircraft manufacturer.

5. Reinstalling the Wheel on the Aircraft

- a. Inspect the axle to ensure that it is clean, dry and in serviceable condition.
- b. Slide the wheel onto the axle with the brake disc side inboard.
- c. Install axle nut and hand tighten ensuring that that inboard wheel bearing is fully seated on the axle.
- d. While slowly rotating the wheel, hand-tighten the axle nut until it is tight. Care must be taken to ensure that the valve stem is not damaged during this process.

- e. If the wheel and tire does not rotate freely, loosen the axle nut only enough so that the wheel runs free, or with very little drag.
- f. Align the axle nut to the nearest hole in the nut with the cotter pin slot in the axle. If you need to move the nut for alignment, first try to tighten it. If the wheel still moves with little or no resistance, use that alignment. If there is significant resistance to rotation, loosen the nut to the next hole.
- g. Install a new cotter pin. One end of the cotter pin should fold out and bend over the end of the axle to its center. The other end should be bent back toward the wheel and shortened if necessary to avoid contact with the wheel. Extreme care must be taken to ensure that the cotter pin does not interfere with the valve stem or other parts of the wheel when the wheel is rotated.
- h. Reinstall the brake caliper backing plate. Torque the bolts to 90 inch-pounds and safety wire.
- i. Reinstall the wheel hub cap.
- j. Rotate the wheel to ensure that it is secure and rotates freely.
- k. Lower the aircraft to the ground following aircraft manufacturer's instructions.